



**Operation manual** 



English

#### Dear customer,

Congratulations on choosing an ADAM Audio S6A Mk2 main monitor!

ADAM loudspeakers are built for maximum quality reproduction and audio perfection. With the S6A Mk2 you have selected one of the most ambitious speaker systems available. This main monitor meets highest expectations in sound quality and craftmansship.

This manual is intended to provide you with information about your new ADAM. It contains **important information regarding safety, setting up, handling, and warranty**. We request that you read these sections carefully to ensure an easy set up and to prevent potential problems.

The S6A Mk2 is suitable for main monitoring. It is perfectly suited for large control rooms, post-production suites, etc.—an ideal tool for situations where a combination of no-compromise sound reproduction and high SPL regions is required.

The S6A Mk2 is a four-way ported active system that uses a single ART tweeter and two ART midrange drivers, ensuring full compatibility with the latest expanded high frequency resolution media formats. It also employs two 7" HexaCone®-midwoofers and two 12" HexaCone®-subwoofers. Driven by 6 amplifiers with an overall power of 1000 watts (RMS), the S6A is powerful enough for rooms of almost any size.

If you have any questions about this or any of our products, please don't hesitate to contact us-we will be happy to assist you in any possible way.

For detailed information concerning the ADAM technologies and products, complete reviews, and a list of worldwide ADAM users and studios, please visit our website:

#### www.adam-audio.com

We hope very much that you really enjoy your new loudspeakers, and wish you many delightful hours with them.

The ADAM Audio Team

<b>1.</b> 1.1 1.2	Quick Start4 Important Information4 Quick Start S6A Mk24
<b>2.</b> 2.1 2.2 2.3	Speaker Placement
<b>3.</b> 1 3.2 3.3 3.4 3.5 3.6 3.7	Controls/Speaker Adjustement
4.	Troubleshooting8
4. 5.	Troubleshooting
	-
5.	Maintenance9
5. 6.	Maintenance9 Transportation / Package9
5. 6. 7.	Maintenance
<ol> <li>5.</li> <li>6.</li> <li>7.</li> <li>8.</li> <li>9.</li> <li>9.1</li> </ol>	Maintenance

#### 1.1 Important information for set up

*Acclimation*: After having unpacked your loudspeaker, please allow the system to acclimate to the temperature of the room. Please do not connect the speaker for approximately an hour.

*HQ Cabling*: We recommend using high quality cables to guarantee optimal performance.

*Solid stand*: It is important to ensure the speakers stand firmly on a solid ground (if they are not wall-mounted)!

*Package*: We recommend not to damage the package and to retain it. The original packaging is the best guarantee for safe transportation (see 7.).

*Break-in time*: Please note that the loudspeakers will need a few days to achieve optimum sonic performance.

#### 1.2 Quick start S6A Mk2



Before connecting the loudspeakers to your audio components and the power source make sure that both the loudspeakers and your audio system is switched off!

- a) Set all level controls fully counterclockwise.
- b) Connect the loudspeakers with your audio units: Use a XLR cable. The male plug goes into the loudspeaker, the female plug into your audio component.
- c) Check if the specified voltage matches the voltage of the power supply you use. If this is not the case do not connect the loudspeakers to a power source! Please contact your local dealer or national distributor.
   If the voltages match, connect the loudspeaker via the included power cables to two AC sockets.
- d) Switch on your audio system. Switch on the main on/off switches on the front panel of the loudspeakers.
- e) Turn on your source of music and adjust the volume carefully.

#### 2.1 General recommendations/advises

*Direct sound ways*: There should be no obstacles in the way from the monitor to your ears. You should be able to see the speakers completely.

*Alignement*: The loudspeakers should be aligned with the listener's position. *Nearby objects*: Please note that vibrating parts of nearby objects can mask the sound.

*Tweeter at the height of ears*: The tweeters should be positioned approximately at the height of your ears. In case you need to position the speaker in a significant lower or higher position, the monitor should be angled accordingly.

#### 2.2 Stereo set up

If the loudspeaker is going to be used for stereo applications, the optimum listening position should be located in the middle of a stereo triangle. This means that your listening position will be located at the top of an imaginary equilateral triangle and the two loudspeakers should be placed at the other two points of this triangle.



Figure 1: Stereo Triangle

#### 2.3 Surround set up

Speaker positioning for multi-channel stereo purposes is ideally based on a circle with speakers placed at 0° (Center), 30° (Front Right), 110° (Rear Right), 250° (Rear Left), 330° (Front Left), with the listener being the circle's center (Radius between 0.7-2.0 m). This ITU recommended configuration may vary depending on the purpose of the control room (music or film). However, it is recommended to create a symmetrical listening position with the front side and surround speaker pointing to the listener's ear.



### 3.1 The front (control) panel

On the front you will find a control panel that allows detailed fine-tuning of your monitors to your particular room acoustics and personal listening preferences. The following tips are intended to assist you at using the controls in the best manner.



*Figure 3*: Control panel

Please note that using the controls may have a great impact on the overall sound characteristics of your loudspeakers. We recommend using the controls with utmost care and only after several audio tests with familiar recordings.

#### 3.2 Input gain



'Input Gain' regulates the overall input sensitivity of your loudspeaker within a range of -10 to +10 dB, and controls the volume of your loudspeaker equally in all frequency ranges.

## 3.3 X-Curve Filter

In large film score mixing rooms, it may be desirable to have a representation of the sound in the theatres. To meet the ISO 2969 Standard, the Dolby<sup>™</sup> X-curve has to be applied. The X-curve engages a 3 dB per octave roll-off above 2 kHz. The S6A Mk2 and S7A Mk2 have a switch located below the input selector that activates this filter, eliminating the need for external processing during the film mix.

## 3. Controls/Speaker Adjustment

### 3.4 Driver gains



Whereas the 'Input Gain' raises or lowers the overall input sensitivity up to +/-10 dB, the 'Driver Gains' work only within the corresponding frequency range, raising or lowering from +/-2 to +/-6 dB.

#### 3.5 High / low shelving



The other two controls operate in a different manner. The 'High Shelve' is a shelving filter that progressively raises or lowers above 6 kHz up to 6 dB. Whereas the gains raise or lower a specific frequency range as a whole, the shelve filters work differently. They do not alter a whole frequency band but alter in this band, from a certain point (6 kHz respectively 150 Hz in this case) the frequencies are gradually being changed (see figure 4 & 5).

a)			
10			
40			
10	100	1000	40000

*Figure 4* ROOM EQ >6 kHz for the high frequencies above 6 kHz



Figure 5 ROOM EQ <150 Hz for the low frequencies below 150 Hz

#### 3.6 Bass EQ Section (parametric EQ)

There are three fully parametric EQs (20 Hz to 200 Hz) that can be used to combat standing waves in the control room. The EQs can be bypassed individually or as a group so that their overall effect can be analyzed in direct comparison to the unaffected signal.



### 3.7 LED Dim

All LED indicators can be dimmed if necessary by pressing the 'LED Dim'button. All ADAM products are designed and manufactured to the highest quality standards. However, if any problems with your speaker occur, we recommend to proceed as follows:

**4.1** *Problem*: The LED shows normal operation (green) but there is either **no or only a distorted audio signal**.

If both (all) speakers are affected, the reason can probably be found within the signal path. If only one speaker is affected, the problem will probably be within this speaker.

- a) Check the wiring Is the cable defective? Are all cables connected correctly?
- b) Check the signal path Interchange the cables of both loudspeakers. Does the problem change with one of the cables? Connect the monitor as directly to the signal source as possible (please mind the volume!). Is another part of the signal path (e.g. mixer, subwoofer) defective?

If the answer to all these question is 'no', the problem is being caused by the loudspeaker with the utmost probability.

If the answer to at least one of these questions is 'yes', there will probably be another defective device within the signal path.

**4.2** *Problem*: You hear **parasitic noises** (like humming, buzzing, soughing, crack-ing).

Please disconnect the signal cables.

If the noises disappear, check the signal path.

If the noises can still be heard, check for other electrical devices close to the speakers (mobile phones, switching power supplies, etc.). If there is no interfering device the speaker will probably cause the problem.



Please switch the loudspeaker off before cleaning!



Please note that the diaphragms build up a magnetic field. Do not play with magnetic items at close range to the diaphragms.



Please make sure that no liquids get inside the cabinet. Do not spray any fluids on the speaker. Do not use a wet cloth for cleaning.



Do not use flammable or acidly chemicals for cleaning.



Do not touch the membranes of the loudspeakers.



We recommend using a lint-free, damp cloth for cleaning. The loudspeaker membranes may be dusted using a very soft brush.

# 6. Transport / Package



In case you have to send your speakers to any other location, it is of vital importance that you use the original packaging materials. Experience has shown that it is very difficult to avoid damage if you have to send them without these. ADAM Audio can not be held responsible for damages due to improper packaging.

If a transport is necessary and the original package is no more available, a new one can be purchased from ADAM Audio.

# 7. Environmental Information

All ADAM products comply with international directives on the Restriction of Hazardous Substances (RoHS) in electrical / electronical equipment and the disposal of Waste Electrical / Electronic Equipment (WEEE).

For disposal, please consult your local authorities for further information.

We,

#### ADAM Audio GmbH

whose registered office is situated at

Lobeckstr. 36, 10969 Berlin, Germany

declare under our sole responsibility that the product:

#### S6A Mk2

complies with the EU Electro-Magnetic Compatibility (EMC) Directive 89/336/EEC, in pursuance of which the following standards have been applied:

EN 61000-6-1 : 2001 EN 61000-6-3 : 2001 EN 55020 : 2002 EN 55013 : 2001

and complies with the EU General Product Safety 2001/95/EC, in pursuance of which the following standard has been applied:

EN 60065 : 2002.

This declaration attests that the manufacturing process quality control and product documentation accord with the need to assure continued compliance.

The attention of the user is drawn to any spezial measures regarding the use of this equipment that may be detailed in the owner's manual.

Signed:

1 x

Roland Stenz Director ADAM Audio

ADAM Audio GmbH provides a two year limited warranty for this product. If anything goes wrong with this product due to manufacturing defects, ADAM Audio and its national distributors will provide repair free of charge (exclusions may apply) and replacement parts.

#### 9.1 Terms and Conditions

This guarantee complements any national/regional law obligations of dealers or national distributors and does not affect your statutory rights as a customer.

This warranty is limited to the repair of the equipment.

Neither transportation, nor any other costs, nor any risk for removal, transportation and installation of products is covered by this warranty.

Products whose serial number have been altered, deleted, removed or made illegible are excluded from this warranty.

The warranty will not be applicable in cases other than defects in materials and/or workmanship at the time of purchase and will not be applicable:

- a) for damages caused by incorrect installation, connection or packing,
- b) for damages caused by any use other than correct use described in the user manual,
- c) for damages caused by faulty or unsuitable ancillary equipment,
- d) if repairs or modifications have been executed by an unauthorized person,
- e) for damages caused by accidents, lightning, water, fire heat, public disturbances or any other cause beyond the reasonable control of ADAM Audio.

#### 9.2 How to claim repairs under warranty

Should service be required, please follow the following procedure: If the equipment is being used in the country of purchase, you should contact your ADAM Audio dealer.

If the equipment is being used outside the country of purchase, you should contact your ADAM Audio national distributor in the country of residence. You will be advised where the equipment can be serviced. Please visit our website to get the contact details of your local distributor.

To validate your warranty, you will need a copy of your original sales invoice with the date of purchase.



#### Please read the following safety instructions before setting up your system. Keep the instructions for subsequent reference. Please heed the warnings and follow the instructions.



Do not open the loudspeaker. There are no user-serviceable parts inside. In case of a problem, please contact either your ADAM dealer or us. We are happy to help. Always refer servicing to gualified personnel and never attempt to repair this product yourself.



This product, as well as all attached extension cords, must be terminated with an earth ground three-conductor AC mains power cord like the one supplied with the product. To prevent shock hazard, all three components must always be used.



Protect the cord from being walked on or pinched.

Never replace any fuse with a value or type other than those specified. Never bypass any fuse.



Always switch off your entire system before connecting or disconnecting any cables, or when cleaning any components.



Please note that the diaphragms build up a magnetic field. Do not ply with magnetic items at close range to the diaphragms.

Do not expose this product to rain or moisture, never wet the inside with any liquid and never pour or spill liquids directly onto this unit. Please do not ut any objects filled with liquids (e.g. vases, etc.) onto the speaker.



Always use fully checked cables. Defective cables can harm your speakers. They are a common source for any kind of noise, hum, crackling etc.

Always keep electrical equipment out of the reach of children.





The monitor should be installed near the socket outlet and disconnection of the device should be easily accessible.

To completely disconnect from AC mains, disonnect the power supply from the AC receptacle.

Never use flammable or combustible chemicals for cleaning audio components.

Avoid touching the speaker membranes and do not block the woofer's ventilation ports.



Never expose this product to extremely high or low temperatures. Never operate this product in an explosive atmosphere.



High SPL's may damage your hearing! Please do not get close to the loudspeakers when using them at high volumes.



Assure free airflow behind the speakers to maintain sufficient cooling.

ADAM S6A	Mk2 - active	4-ways	bass ref	flex loudspea	ker

Woofer/Subwoofer	2/2		
Basket ø	7"/12" HexaCone®		
Voice coil ø	1.5"/2.5"		
ART Tweeter	1		
Diaphragm area	71 cm <sup>2</sup>		
Equivalent diaphragm ø	9,5 cm		
Speed transformation ratio	4:1		
Diaphragm weight	0,17 g		
ART Midrange	2		
Diaphragm area	213 cm <sup>2</sup>		
Equivalent diaphragm ø	16,5 cm		
Speed transformation ratio	3.5:1		
Diaphragm weight	0,7 g		
Built-in amplifiers	6 (Class 1)		
AC Voltage	100-120 V~, 50/60 Hz <sup>*3</sup> 220-240 V~, 50/60 Hz <sup>*3</sup>		
Subwoofer channel (*1/*2)	2 x 500 W / 700 W		
Woofer channel (* 1/*2)	2 x 150 W / 200 W		
Midrange channel (* 1/*2)	150 W / 200 W		
Tweeter channel (* 1/*2)	150 W / 200 W		
General Data			
Frequency response (± 3 dB)	23 Hz - 35 kHz		
Crossover frequencies	85 / 800 / 3100 Hz		
THD >80 Hz at 90 dB in 1 m	≤ 0,5 %		
Short time sine wave acoustic output at 1 m, 100 Hz - 3 kHz	≥124 dB		
Max. peak acoustic output per pair with music	≥134 dB		
Impedance	10 kΩ		
Height x Width x Depth	720 x 940 x 490 mm		
Weight	103 kg (227 pounds)		
Warranty	2 years		
Input	XLR (balanced)		
Operating temperature	0° C bis 40° C (32° F bis 104° F)		
Storage temperature	-30° C bis 70° C (-22° F bis 167° F)		
Humidity	Max. 90% not condensing		

\*1 = long term IEC 265-8-Wrms/10 min // \*2 = nominal IEC 265-8 = Peak Power 5  $\mu sec$  \*3 = pay attention to the selected voltage on the rearside of the speaker

#### ADAM Audio GmbH

Ederstr. 16 | 12059 Berlin-Germany phone: +49 30-863 00 97-0 fax: +49 30-863 00 97-7 email: info@adam-audio.com

#### ADAM Audio USA

31312 Via Colinas Unit 108 | Westlake Village | CA, 91362 phone: +1 818-991 3800 fax: +1-818-991 3808 email: usa@adam-audio.com

#### www.adam-audio.com